



**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	TV/VCR - DVD		Smart
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide
	Mute		Mute
	I-II Audio		Dual
	TV/Text		Text
	Input		AV

**Originalfernbedienung    Ersatzfernbedienung**

	Vol+		Vol +
	Vol-		Vol -
	P/TRK+		Ch +
	P/TRK-		Ch -
	Slow+		Shift + Ch +
	Slow-		Shift + Ch -
	<< / Index		<<
	S.Mode		Shift + Dual
	P.Mode		Format
	>> / Mix		>>
	I<<		I<<
	>>I		>>I
	Stop		Stop
	Play / Pause		Play
	Play / Pause		Pause
	Red / Menu		Red
	Red / Menu		Menu



