




 
 




 







Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Operate (AC Only)		Power				
	Function		Menu				
	Band		TV/R				
	Play/Pause		Play				
	Play		Yellow				
	Pause		Pause				
	>> /Preset+		>>				
	>>/Tune+		>>				
	<</Preset-		<<				
	<</Tune-		<<				
	Stop		Stop				
	Vol+		Vol +				
	Vol-		Vol -				

