





























 













 













 





 
 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Lang		Audio / Lang I/II
	0		0
	Recall		Back / Return
	Vol+		Vol+
	*/Setting		Setup / OPT /
	P+		CH+ / Page+

 

 





 

 













Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol-
	HDMI		Shift + 0
	P-		CH- / Page-
	Media		Shift + Display / Media
	P.Mode		Picture / Format
	Home		Shift + Menu /
	S.Mode		Sound / Title
	Menu		Menu / Home
	Up		Up
	Source		AV / Input / RDS
	Left		Left
	Enter		OK
	Right		Right
	Display		Display / Media
	Down		Down
	Exit		Exit / Cancel / Clear
	Red		Red / Netflix / Search





Originalfernbedienung Ersatzfernbedienung

	Green		Green / APP / Repeat
	Sub.T		Subtitle / EQ
	Yellow		Yellow / YouTube / Repeat
	Blue/Mouse		Blue / Prime Video / Random
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Rec		Rec / Rec Mode

Originalfernbedienung Ersatzfernbedienung

