





 

 



 
















 

 

 

 

 



 





 
 
 

 




**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Menu		Menu
	Exit		Exit
	Up / Ch+		Ch +
	Up / Ch+		Up
	Down / Ch-		Ch -

**Originalfernbedienung    Ersatzfernbedienung**

	Down / Ch-		Down
	Right / Vol+		Vol +
	Right / Vol+		Right
	Left / Vol-		Vol -
	Left / Vol-		Left
	Ok/Store		Ok
	Info		Info
	Tv/Rad		TV/R
	Fav		Pre Ch
	Epg		Guide
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Subtitle		Subt
	Audio		Dual
	View		Format



