
 

 



 
 
 
 
 













 

 










**Originalfernbedienung    Ersatzfernbedienung**

	Power On		Power
	Standby	 + 	Shift + Power
	Focus		Volt / Focus
	Zoom		Eco / Aspect
	Shift		Source
	Menu		Menu
	Shutter		+ / Play
	On-Screen		Mode
	Test Pattern		Auto
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Enter
	RGB 1/2		Freeze / Timer
	Digital Link		Vol - / Page -
	DVI-D		- / Stop

**Originalfernbedienung    Ersatzfernbedienung**

	Video		Comp / Video
	SDI		Help / Info
	HDMI		3D / Invert
	Function		Vol + / Page +
	Status		Shift + Auto
	Default		Blank / Mute
	1		Shift + Vol + / Page +
	2		Shift + + / Play
	3		Shift + Volt / Focus
	4		Shift + Vol - / Page -
	5		Shift + - / Stop
	6		Shift + Help /
	7		Shift + Eco / Aspect
	8		Shift + 3D /
	9		Shift + Blank / Mute
	0		Shift + Comp / Video
	Auto Setup		Shift + Menu



