





 
 




Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Vol+		Vol +				
	Vol-		Vol -				
	Play CD		Play				
	Pause CD		Pause				
	Stop CD		Stop				
	I<< CD		I<<				
	>>I CD		>>I				
	Disc Skip CD		Smart				
	Tuner Preset +		Ch +				
	Tuner Preset -		Ch -				
	Function Tape		1				
	Function Tuner		2				
	Function CD		3				
	Function Phono		4				

