



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Computer		Comp / Video
	Video		Shift + Comp / Video
	Menu		Menu
	Keystone		Shift + Up
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Vol+		Vol + / Page +
	Vol-		Vol - / Page -
	Select		Enter
	D.Zoom+		+ / Play
	D.Zoom-		- / Stop
	Auto PC		Auto
	Image		Eco / Aspect
	Freeze		Freeze / Timer

Originalfernbedienung Ersatzfernbedienung

	P-Timer		Shift + Freeze / Timer
	No Show		Source
	Mute		Blank / Mute
	Lamp Control		3D / Invert

