



 



 
 




 









 





 





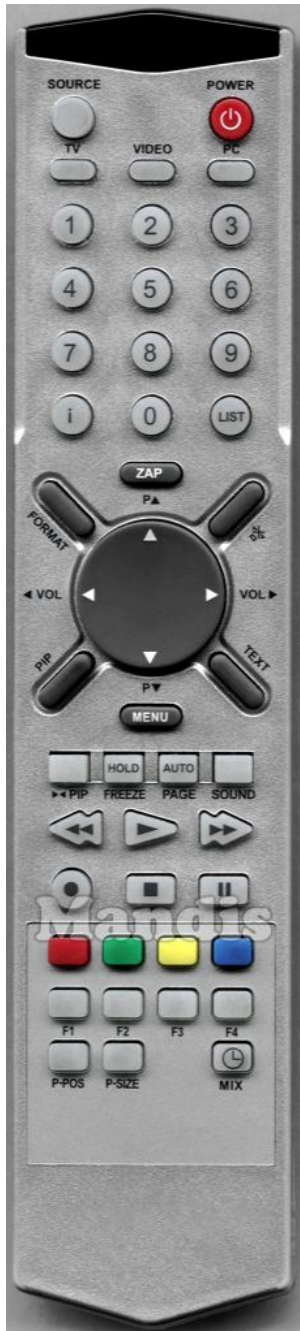
Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV
	TV		TV/R
	VIDEO		Smart
	PC		Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	i		Info
	List		List

Originalfernbedienung Ersatzfernbedienung

	ZAP		Pre Ch
	Format		Format
	Mute		Mute
	PIP		3D
	Text		Text
	Up / P+		Up
	Up / P+		Ch +
	Down / P-		Down
	Down / P-		Ch -
	Right / Vol+		Right
	Right / Vol+		Vol +
	Left / Vol-		Left
	Left / Vol-		Vol -
	Menu		Menu
	PIP Swap		Back
	Auto		Options
	Sound		Dual





Originalfernbedienung Ersatzfernbedienung

	Freeze / Hold	+	Shift + Stop
	<<		<<
	Play		Play
	>>		>>
	Rec		Rec
	Stop		Stop
	Pause		Pause
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	F1	+	Shift + 1
	F2	+	Shift + 2
	F3	+	Shift + 3
	F4	+	Shift + 4
	P-Pos	+	Shift + Ch +
	P-Size	+	Shift + Ch -

Originalfernbedienung Ersatzfernbedienung

	Clock / Mix	+	Shift + Text

