




 

 

 

 



 

 

 

 

 

 





 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Clear		Exit
	Enter		Pre Ch
	TV/DVD / Input		AV
	Aspect		Shift + Format
	SA-CD		Smart


 

 



 

















 


Originalfernbedienung Ersatzfernbedienung

	SA-CD/CD		Media
	Shuffle		Yellow
	A-B		Shift + Play
	Audio		Dual
	Subtitle		Subt
	Angle		Red
	Picture Navi		3D
	Time/Text		Text
	Repeat		Shift + Text
	Sur		Options
	Picture Mode		Format
	Search Mode		TV/R
	Replay		Shift + I<<
	I<<		I<<
	>>I		>>I
	< [<<<]		Ch -
	[>>>] >		Ch +









 
 




 



 

 











Multi/2CH



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	<< Scan/<I		<<
	Scan >>/Slow		>>
	Play		Play
	Pause		Pause
	Stop		Stop
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Display		Info
	Menu		Menu
	Top Menu		D. Menu
	Return		Back




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Enter		Ok
	TV/DVD		TV/R
	Vol+		Vol +
	Vol-		Vol -

Originalfernbedienung Ersatzfernbedienung

