


 

 











 



 

 





 








Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Input		AV
	OK		Ok
	CH+		Ch +
	CH-		Ch -
	Menu		Menu
	Preset		Smart

Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Rec		Rec
	Play		Play
	SET		Media
	Up		Up
	Pause/Still		Pause
	Down		Down
	Stop		Stop
	Right		Right
	>>		>>
	<<		<<
	Left		Left
	Tv/VCR		TV/R
	Clear		Exit
	Reset		Red
	Index		Blue
	DPC		Yellow
	Remain		Green



