 



 





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	POWER		Power		3/COLOR		3
	FREEZE		Pause		3/COLOR		Yellow
	HIDE		Media		4/VGA		4
	ASPECT RATIO		Format		5/COMPONENT		5
	RESYNC		Smart		6/VIDEO		6
	SOURCE		AV		7/DVI		7
	ZOOM		Eject		8/HDMI		8
	e		3D		9/WIRELESS		9
	Up/Keystone Up		Up		0/MUTE		Mute
	Left		Left		0/MUTE		0
	MENU		Menu		PgUp/CONTRAS		Ch +
	Right		Right		PgUp/CONTRAS		Blue
	Down/Keystone		Down		PgDn/S-Video		Ch -
	1/RGB		1				
	1/RGB		Red				
	2/BRIGHTNESS		2				
	2/BRIGHTNESS		Green				

