



 

 

 

 





 

 

 

 

 

 





 





Originalfernbedienung Ersatzfernbedienung

	Standby		Shift + Power
	System Power		Power
	CD		Shift + 3
	MD / CD-R		Shift + 5
	TUNER		Shift + 6
	Sleep		Sleep / Timer
	DVD		Shift + 2
	DTV/CBL		Guide / EPG / -/--
	V-AUX		Shift + 7
	Multi CH In		Display / Media
	VCR 1		Shift + 1
	DVR / VCR2		Fav / Marker / PC
	Preset/CH+		CH+ / Page+
	Volume+		Vol+
	Preset/CH-		CH- / Page-
	Volume-		Vol-
	Mute		Mute / Dimmer

Originalfernbedienung Ersatzfernbedienung

	Stereo		Shift + Audio / Lang I/II
	1		1
	Music		Smart / List
	2		2
	Entertain		Shift + Display / Media
	3		3
	Movie		Picture / Format
	4		4
	5		5
	Standard		Shift + OK
	Select		OK
	6		6
	7		7
	Extd Sur.		Exit / Cancel / Clear
	8		8
	Pure Direct		D.Menu / Top
	Speakers A		Sound / Title





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	9		9				
	Speakers B		Audio / Lang I/II				
	0		0				
	Night		Shift + Sleep / Timer				
	Straight / Effect		Text / Goto				
	Level		Setup / OPT /				
	Up		Up				
	Set Menu		Menu / Home				
	Left		Left				
	A/B/C/D/E		Yellow / YouTube / Repeat				
	Right		Right				
	Down		Down				

