
 


 

 
 
 



 

 



 
 


 





 






Originalfernbedienung Ersatzfernbedienung

 




 
 


 
 


 


 
On/Off		Power
Audio Off		Mute
Slow Down		Ch -
Slow Up		Ch +
Pause		Pause
Auto/Track		Smart
Stop		Stop
Subt.		Subt
Title		List
Rep/A-B		TV/R
Pepeat/1/All		Text
Zoom		Shift + Eject
DVD/TV		AV
Menu		Menu
Menu Up		Up
Display		Info
Return		Back

Originalfernbedienung Ersatzfernbedienung



 

 
Menu Left		Left
OK Enter		Ok
Progr.		Sleep
Next		>>
Menu Right		Right
Prev.		<<
Menu Down		Down
Volume+		Vol +
Volume-		Vol -
Top Menu		D. Menu
1		1
2		2
3		3
4		4
5		5
Store		Red
6		6



Originalfernbedienung Ersatzfernbedienung





 



 
 




Digest		Green
7		7
Open/Close		Eject
8		8
9		9
Clear/00:00		Exit
+10		Guide
Record		Rec
Auto Scan		Media
Rewind		<<
Play		Play
F.Forward		>>
Setup		Options
Audio		Dual
3D		3D
0		0
C/CH		Pre Ch

Originalfernbedienung Ersatzfernbedienung

 

 

 


 









Angle		Format
Np	 + 	Shift + Subt
Info	 + 	Shift + Info



 


 
Originalfernbedienung Ersatzfernbedienung

On/Off		Power
Audio Off		Mute
Stop		Stop
Pause		Pause
Slow Up		Ch +
Slow Down		Ch -
Subt.		Subt
Auto/Track		Sleep
Rep/A-B		TV/R
Zoom	 + 	Shift + Eject
Title		List
Pepeat/1/All		Text
DVD/TV		AV
Menu		Menu
Menu Up		Up
Display		Info
Menu Left		Left

Originalfernbedienung Ersatzfernbedienung


 


 



 



 




OK Enter		Ok
Menu Right		Right
Return		Exit
Menu Down		Down
Progr.		Back
Volume+		Vol +
Top Menu		D. Menu
Next		>>I
Volume-		Vol -
1		1
2		2
3		3
Prev.		I<<
4		4
5		5
6		6
7		7



 








 
 


 


Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
8			8
Video			Smart
9			9
+10			Guide
0			0
C/CH			Pre Ch
Rewind			<<
Random			Media
Angle			Format
R/L	 + 		Shift + Info
Play			Play
Record			Rec
F.Forward			>>
3D			3D
Open/Close			Eject
Audio			Dual



Originalfernbedienung Ersatzfernbedienung

On/Off		Power
Audio Off		Mute
Slow Down		Ch -
Slow Up		Ch +
Auto/Track		Smart
Stop		Stop
Subt.		Subt
Pause		Pause
Zoom		Shift + Eject
Title		List
Rep/A-B		TV/R
Pepeat/1/All		Text
DVD/TV		AV
Menu		Menu
Menu Up		Up
Display		Info
Menu Left		Left

Originalfernbedienung Ersatzfernbedienung

OK Enter		Ok
Menu Right		Right
Return		Back
Menu Down		Down
Next		>>
Progr.		Sleep
Volume+		Vol +
Top Menu		D. Menu
Volume-		Vol -
Prev.		<<
1		1
2		2
3		3
4		4
5		5
6		6
7		7



Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
8		8		Store	+	Shift + Down	
Open/Close		Eject		Angle		Format	
Mode		Media		Lang		Dual	
9		9					
Setup		Options					
+10		Guide					
3D		3D					
0		0					
C/CH		Pre Ch					
Play/Back	+	Shift + Left					
Resume	+	Shift + Play					
Play		Play					
Karaoke/Step	+	Shift + Pause					
Np	+	Shift + Subt					
Record		Rec					
F.Forward		>>					
Rewind		<<					

