



 

 


 










 


 
 
 
 

 
 





 





 


 




 

 

 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	.	 + 	Shift + Guide
	Recall		Back
	Menu		Menu
	Source		AV
	Exit		Exit

Originalfernbedienung Ersatzfernbedienung

	Tv Display		Info
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Vol+		Vol +
	Vol-		Vol -
	S.M.		Smart
	P.M.		Media
	CH+		Ch +
	CH-		Ch -
	EPG Page Up	 + 	Shift + Up
	EPG Page Down	 + 	Shift + Down
	Sleep		Sleep
	P.G.		Format
	Aspect		3D




**Originalfernbedienung   Ersatzfernbedienung**

	CH List		List
	EPG		Guide
	FAV		Pre Ch
	DTV Strenght		D. Menu
	TV		TV/R
	AV		Eject
	HDMI		Text
	YPbPr		Shift + Format
	CC		Subt
	MTS/SAP		Dual
	VGA		Options
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

**Originalfernbedienung   Ersatzfernbedienung**