
 
 


 








 



 


 



 

 










Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
On/Off	 Power	OK Enter	 Ok
Audio Out	 Mute	Menu Right	 Right
Slow Down	 TV/R	Exit	 Exit
F.Adv	 List	Menu Down	 Down
Stop	 Stop	T.Set/Clock	 Red
Auto/Track	 Options	Tracking+	 Vol +
Pause	 Pause	Next	 >>
Sp/Lp/Speed	 3D	Tracking-	 Vol -
Slow/Dpss-	 +  Shift + Ch -	Audio	 Dual
Mon/TV	 Smart	Prev.	 <<
Video/Go-To	 D. Menu	1	 1
VCR/TV	 Media	2	 2
Menu	 Menu	3	 3
Slow/Dpss+	 +  Shift + Ch +	4	 4
Menu Up	 Up	5	 5
Display	 Info	6	 6
Menu Left	 Left	7	 7



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
8		8	
9		9	
-/--		Guide	
0		0	
Progr/C/CH		Pre Ch	
On/Off	 + 	Shift + Power	
Record		Rec	
Rewind		<<	
Input Source		AV	
Next Sv+V		Subt	
F.Forward		>>	
Vps/Pdc		Format	
Play		Play	
Count Remain		Yellow	
Set+	 + 	Shift + Vol +	
Counter/Memor		Blue	
Frame Down		Text	
Info/Intro	 + 	Shift + Info	
Counter Clock		Green	
Timer/Sleep		Sleep	
Chan-		Ch -	
Set-	 + 	Shift + Vol -	
Chan+		Ch +	
Eject/Reverse		Eject	
Audio Dub	 + 	Shift + Red	
Encode	 + 	Shift + Green	
X2 Rew/Play	 + 	Shift + Yellow	
P.Back/R.+Play	 + 	Shift + Blue	

