 

 

 


 


 

 



 
 
 

 

 

 
 

 


 
 


 


 
 







Originalfernbedienung Ersatzfernbedienung

	System Power		Power
	Standby		Shift + Power
	Sleep		Sleep
	CD		Shift + 1
	MD / CD-R		Shift + 2
	TUNER		Shift + 3
	DVD		Shift + 4
	DTV/CBL		Shift + 5
	V-AUX		Shift + 6
	VCR		Shift + 7
	Multi CH In		Shift + 8
	Volume+		Vol +
	Volume-		Vol -
	Mute		Mute
	Stereo		Play
	1		1
	2		2

Originalfernbedienung Ersatzfernbedienung

	HALL		Pause
	3		3
	Jazz		Stop
	4		4
	Rock		Rec
	Music		I<<
	5		5
	Entertain		<<
	6		6
	7		7
	TV Thtr		>>
	Movie		>>I
	8		8
	Dolby DTS		List
	9		9
	Night		Dual
	0		0



