
 



**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Menu		Menu
	Title		List
	Setup		Options
	Angle		Red
	Repeat		Text
	A-B Repeat		TV/R
	Slow		Pre Ch
	File Info		Info
	Time Search		AV
	Brt Cont.		Green
	Media Type		Media
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok

**Originalfernbedienung Ersatzfernbedienung**

	Main Page		Smart
	Play		Play
	Pause		Pause
	Stop		Stop
	<<		<<
	>>		>>
	I<<		I<<
	>>I		>>I
	Video		Yellow
	Audio		Dual
	Subtitle		Subt
	Scr Size		Format
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	1		1
	2		2





**Originalfernbedienung    Ersatzfernbedienung**

<b>3</b>	3	<b>3</b>	3
<b>4</b>	4	<b>4</b>	4
<b>5</b>	5	<b>5</b>	5
<b>6</b>	6	<b>6</b>	6
<b>7</b>	7	<b>7</b>	7
<b>8</b>	8	<b>8</b>	8
<b>9</b>	9	<b>9</b>	9
<b>0</b>	0	<b>0</b>	0
<b>CANCEL</b>	Cancel	<b>CLEAR EXIT</b>	Exit

**Originalfernbedienung    Ersatzfernbedienung**