


 

 



 

 

 

 

 

 

 

 

 

 










Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	DVD Menu		D. Menu
	OSD Set Up		Options
	Return		Back
	OK		Ok
	Up		Up
	Left		Left

Originalfernbedienung Ersatzfernbedienung

	Right		Right
	Down		Down
	Subtitle		Subt
	Audio		Dual
	Angle		Format
	T-C		Smart
	Zoom		Eject
	I< / <<		I<<
	I< / <<		<<
	>I / >>		>>I
	>I / >>		>>
	Stop		Stop
	Play		Play
	Pause		Pause
	Repeat		Text
	Repeat A-B		Shift + Text
	Shuffle		TV/R

