

 



 

 

 

 

 
 
 
 
 


 







 







 



 


 

 

 



 
 


 





 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Eject		Eject
	Tv/VCR		TV/R
	AV		AV
	CM Skip		Smart
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	ez Power Off		Media
	ez Repeat		Text

Originalfernbedienung Ersatzfernbedienung

	<<		<<
	Play		Play
	>>		>>
	Pause/Still		Pause
	Stop		Stop
	LP		Format
	i		Info
	OK/CLK/CNT		Ok
	Rec/OTR		Rec
	Clear		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	C.Lock		Blue

