


Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Eject		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Lock	 + 	Shift + Stop
	Rec ITR		Red
	LP		Options
	REW		<<
	FF		>>

Originalfernbedienung Ersatzfernbedienung

	Pause/Still		Info
	Stop		Stop
	Play		Play
	i		Menu
	AV		AV
	Clear		Exit
	TV/VCR		TV/R
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	ez REPEAT		Text
	CM Skip		Sleep
	ez POWER OFF		Subt
	*		Format

