

 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Continued		3D
	Open / Close		Eject
	Audio		Dual
	Subtitle		Subt
	Display		Info
	CD/SACD		AV
	Miracast		Guide
	FL Dimmer		Mute
	Repeat		Text
	Replay		Ch -
	Short Skip		Ch +
	A-B		Shift + Text
	Youtube		Smart
	HDMI		Shift + AV
	I<<		I<<
	Stop		Stop

 

 






 
 

 





 





 


 
 


Originalfernbedienung Ersatzfernbedienung

	>>I		>>I
	<<		<<
	Play/Pause		Pause
	Play/Pause		Play
	>>		>>
	Top Menu		Shift + Menu
	Popup Menu		D. Menu
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Home Menu		Menu
	Return		Back
	Red / Program		Sleep
	Red / Program		Red
	Green / Bookmark		Green





Originalfernbedienung Ersatzfernbedienung

 ZOOM	Yellow / Zoom	 C	Yellow
 ZOOM	Yellow / Zoom	 SHIFT + 	Shift + Eject
 INDEX	Blue / Index	 D	Blue
 1	1	 1	1
 2	2	 2	2
 3	3	 3	3
 4	4	 4	4
 5	5	 5	5
 6	6	 6	6
 7	7	 7	7
 8	8	 8	8
 9	9	 9	9
 0	0	 0	0
	Clear	 EXIT	Exit
	Function	 PRE-CH	Pre Ch

Originalfernbedienung Ersatzfernbedienung