




 


 

 
















 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	USB		1
	BT		2
	AUX		3
	SD		4
	OPT		5
	Line In		6
	Vol+		Vol +
	Vol+		Up
	Vol-		Vol -
	Vol-		Down
	>>I		>>I
	>>I		Right
	I<<		I<<
	I<<		Left
	Play / Pause		Ok

Originalfernbedienung Ersatzfernbedienung

	Play / Pause		Play
	Play / Pause		Pause

