







 










 

 

 







 






**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Mute		Mute
	Display		Info
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

**Originalfernbedienung    Ersatzfernbedienung**

	Subpage		Media
	Pre-CH		Pre Ch
	PC		Smart
	Tv/Video		TV/R
	Sleep		Sleep
	Sound		Dual
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Menu		Menu
	Mix		AV
	Teletext		Text
	Text Size		Format
	Red		Red
	Green		Green
	Yellow		Yellow





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Blue		Blue				
	Index		List				
	Subtitle		Subt				
	Hold		D. Menu				
	Reveal		Options				
	PIP/POP		3D				
	PIP Swap		Back				
	PIP Size		Eject				

