





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------|---|----------------|
|  | Power On |  | Power |
|  | Power Off |  | Shift + Power |
|  | Zone 2 |  | Media |
|  | Mute |  | Mute |
|  | Cable/SAT |  | Shift + 1 |
|  | STB |  | Shift + 2 |
|  | TV |  | Shift + 3 |
|  | Disc |  | Shift + 4 |
|  | MHL |  | Shift + 5 |
|  | AUX |  | Shift + 6 |
|  | Audio |  | Shift + 7 |
|  | Game |  | Shift + 8 |
|  | AVR |  | Shift + 9 |
|  | USB |  | Shift + Guide |
|  | Network |  | Shift + 0 |
|  | Radio |  | Shift + Pre Ch |
|  | Surr Mode |  | Dual |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------|---|-------|
|  | OSD Menu |  | Menu |
|  | Up |  | Up |
|  | Left |  | Left |
|  | OK |  | Ok |
|  | Right |  | Right |
|  | Down |  | Down |
|  | Back/Exit |  | Back |
|  | Home |  | Smart |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|---------------|--|---------|
| | 0 | | 0 |
| | Clear | | Exit |
| | Test | | Text |
| | Vol+ | | Vol + |
| | Vol- | | Vol - |
| | Delay | | Options |
| | Info/Option | | Info |
| | Sleep | | Sleep |
| | Dim | | List |
| | CH/Tuner Up | | Ch + |
| | CH/Tuner Down | | Ch - |
| | P-Scan / Top | | D. Menu |
| | Direct | | TV/R |
| | Mem | | Rec |
| | RDS/* | | Subt |
| | I< | | I<< |
| | << | | << |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--------|--|--------|
| | >> | | >> |
| | > | | >> |
| | Stop | | Stop |
| | Play | | Play |
| | Pause | | Pause |
| | PrevCH | | Pre Ch |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------|---|----------------|
|  | Power On |  | Power |
|  | Power Off |  | Shift + Power |
|  | Zone 2 |  | Media |
|  | Mute |  | Mute |
|  | Cable/SAT |  | Shift + 1 |
|  | STB |  | Shift + 2 |
|  | TV |  | Shift + 3 |
|  | Disc |  | Shift + 4 |
|  | MHL |  | Shift + 5 |
|  | AUX |  | Shift + 6 |
|  | Audio |  | Shift + Dual |
|  | Game |  | Shift + 8 |
|  | AVR |  | Shift + 9 |
|  | USB |  | Shift + Guide |
|  | Network |  | Shift + 0 |
|  | Radio |  | Shift + Pre Ch |
|  | Surr MOde |  | Dual |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------|---|-------|
|  | OSD Menu |  | Menu |
|  | Up |  | Up |
|  | Left |  | Left |
|  | OK |  | Ok |
|  | Right |  | Right |
|  | Down |  | Down |
|  | Back/Exit |  | Back |
|  | Home |  | Smart |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |


 

 



 

 






Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---------------|---|---------|
|  | 0 |  | 0 |
|  | Clear |  | Exit |
|  | Test |  | Text |
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |
|  | Delay |  | Options |
|  | Info/Option |  | Info |
|  | Sleep |  | Sleep |
|  | DIM |  | List |
|  | CH/Tuner Up |  | Ch + |
|  | CH/Tuner Down |  | Ch - |
|  | P-Scan/Top |  | D. Menu |
|  | Direct |  | TV/R |
|  | Mem |  | Rec |
|  | RDS/* |  | Subt |
|  | I< |  | I<< |
|  | << |  | << |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------|---|--------|
|  | >> |  | >> |
|  | > |  | >> |
|  | Stop |  | Stop |
|  | Play |  | Play |
|  | Pause |  | Pause |
|  | PrevCH |  | Pre Ch |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

