



Originalfernbedienung Ersatzfernbedienung

	POWER		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	MUTE		Mute / Dimmer
	0		0
	TEXT		Text / Goto
	GUIDE		Guide / EPG / -/--
	INFO		Info / Angle
	UP		Up
	FAV		Fav / Marker / PC

Originalfernbedienung Ersatzfernbedienung

	LEFT		Left
	OK		OK
	RIGHT		Right
	LAST		Exit / Cancel / Clear
	DOWN		Down
	Back		Back / Return
	Menu		Menu / Home
	RED / MOSAIC		Red / Netflix / Search
	GREEN / SLEEP		Shift + Sleep / Timer
	GREEN / SLEEP		Green / APP / Repeat
	YELLOW /		Yellow / YouTube / Repeat
	YELLOW /		Audio / Lang I/II
	BLUE / LIST		Smart / List
	BLUE / LIST		Blue / Prime Video / Random
	VOL+		Vol+
	PAGE UP		Shift + CH+ /
	CH+		CH+ / Page+



