



Originalfernbedienung Ersatzfernbedienung









 



	Power		Power
	Tv/Rad		TV/Radio /
	Subtitle		Subtitle / EQ
	AD/PIP		Audio / Lang I/II
	[?]		Zoom / Size
	Input		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	List		Smart / List
	0		0

Originalfernbedienung Ersatzfernbedienung

	Q.View		Picture / Format
	Vol+		Vol+
	FAV		Fav / Marker / PC
	P+		CH+ / Page+
	Vol-		Vol-
	Guide		Guide / EPG / -/--
	P-		CH- / Page-
	Mute		Mute / Dimmer
	Text		Text / Goto
	Info		Info / Angle
	T.Opt		Setup / OPT /
	Settings		Menu / Home
	Up		Up
	Q.Menu		D.Menu / Top
	Left		Left
	OK		OK
	Right		Right




Originalfernbedienung Ersatzfernbedienung

	Back		Back / Return
	Down		Down
	EXit		Exit / Cancel / Clear
	Simplink		Display / Media
	TV/PC	 + 	Shift + Fav / Marker / PC
	Stop		Stop / Hold
	<<		<< / Tune-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow/Bright-		Yellow / YouTube / Repeat
	Blue/Bright+		Blue / Prime Video / Random

Originalfernbedienung Ersatzfernbedienung

