 



 

 
 


 
 





 

 

 









 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Standby	 + 	Shift + Power
	Volume+		Vol +
	Volume-		Vol -
	Mute		Mute
	Up / Preset/CH+		Up
	Down / Preset/CH-		Down
	Right /		Right
	Left / A/B/C/D/E-		Left
	Menu/Set Menu/Srch Mode		Menu
	Enter		Ok
	Return/Memory		Back
	Title/Level/Band		TV/R
	Display		Info
	Audio		Dual
	Pure Direct		Smart
	Straight		Media

Originalfernbedienung Ersatzfernbedienung

	Classical		1
	Live/Club		2
	Entertain		3
	Movie		4
	Stereo		5
	Enhancer		6
	Sur.Decode		7
	Parameter		8
	Multi CH In		9
			0
	Sleep		Pre Ch
	<</Info		<<
	>>/Eon		>>
	I<</Mode PTY		I<<
	>>I/PTY Seek		>>I
	Scene 1		Red
	Scene 2		Green





Originalfernbedienung Ersatzfernbedienung

 

	Scene 3		Yellow
	Scene 4		Blue
	Tuner		Shift + 1
	C		Shift + Yellow
	V-AUX/Dock		Shift + 3
	DTV/CBL		Shift + 4
	CD		Shift + 5
	MD/CD-R		Shift + 6
	DVD		Shift + 7
	DVR		Shift + 8
	VCR		Shift + 9
	Phono		Shift + Pre Ch

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Volume+		Vol +
	Volume-		Vol -
	Mute		Mute
	Band		TV/R
	Search Mode		AV
	Memory		Back
	Preset Up		Up
	Preset Down		Down
	Right A/B/C/D/E		Right
	Left A/B/C/D/E		Left
	Enter		Ok
	Display		Info
	1		1
	2		2
	3		3
	4		4

 
 

 
 

 


 



 

 





Originalfernbedienung Ersatzfernbedienung

	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	ENT		Pre Ch
	Info		Red
	PTY Seek Start		Blue
	Eon		Green
	Mode PTY Seek		Yellow
	Power		Shift + Power
	Up V-AUX/Dock		Shift + Up
	Down		Shift + Down
	Right V-AUX/Dock		Shift + Right
	Left		Shift + Left
	Enter V-AUX/Dock		Shift + Ok



 
 
 
 
 


 










Originalfernbedienung Ersatzfernbedienung

 Audio V-AUX/Dock	 Dual
 Display	 Shift + Info
 Return	 Shift + Back
 Menu	 Menu
 Title V-AUX/Dock	 Shift + TV/R
 1 V-AUX/Dock	 Shift + 1
 2 V-AUX/Dock	 Shift + 2
 3 V-AUX/Dock	 Shift + 3
 4 V-AUX/Dock	 Shift + 4
 5 V-AUX/Dock	 Shift + 5
 6 V-AUX/Dock	 Shift + 6
 7 V-AUX/Dock	 Shift + 7
 8 V-AUX/Dock	 Shift + 8
 9 V-AUX/Dock	 Shift + 9
 0 V-AUX/Dock	 Shift + 0
 +10	 Shift + Guide
 ENT	 Shift + Pre Ch

Originalfernbedienung Ersatzfernbedienung

 << V-AUX/Dock	 <<
 I<<	 I<<
 >>I	 >>I
 >> V-AUX/Dock	 >>
 Rec V-AUX/Dock	 Rec
 Stop	 Stop
 Pause	 Pause
 Play	 Play







V-AUX/Dock



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Standby	 + 	Shift + Power
	Tuner		1
	C		Yellow
	V-AUX/Dock		3
	DTV/CBL		4
	CD		5
	MD/CD-R		6
	DVD		7
	DVR		8
	VCR		9
	Phono		Pre Ch
	Volume+		Vol +
	Volume-		Vol -
	Mute		Mute
	<</Info		<<
	>>/Eon		>>

Originalfernbedienung Ersatzfernbedienung

	I<</Mode PTY		I<<
	>>/PTYSeek		>>I







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Standby		Shift + Power
	Tuner		1
	C		Yellow
	V-AUX/Dock		3
	DTV/CBL		4
	CD		5
	DVD		7
	DVR		8
	VCR		9
	Phono		Pre Ch
	Volume+		Vol +
	Volume-		Vol -
	Mute		Mute
	<</Info		<<
	>>/Eon		>>
	I<</Mode PTY		I<<

Originalfernbedienung Ersatzfernbedienung

	>>/PTY Seek		>>I
---	-------------	---	-----

