



Originalfernbedienung Ersatzfernbedienung

	ACOU		Text
	FM/AM		AV
	CD		Format
	TV		3D
	CDV		Red
	Phono		Green
	Tape		Yellow
	VCR		Blue
	Rear		Exit
	Front		Back
	Volume Up		Vol +
	Volume Down		Vol -
	Mute ACOU		Mute
	L ACOU		Smart
	R ACOU		Media
	1 ACOU		1
	2 ACOU		2

Originalfernbedienung Ersatzfernbedienung

	3 ACOU		3
	4 ACOU		4
	5 ACOU		5
	6 ACOU		6
	7 ACOU		7
	8 ACOU		8
	9 ACOU		9
	10/0 ACOU		0
	11/+ ACOU		Guide
	12/- ACOU		Pre Ch
	Memo/CH/PGM TV		Options
	Mode ACOU		Subt
	Mode TV		Shift + Subt
	Volume Up TV		Right
	Volume Down		Left
	Mute TV		Shift + Mute
	L TV		Shift + Smart








 

 

 

 
 
 
 
 



 

 



 

 





 

 
	Originalfernbedienung	Ersatzfernbedienung	
R	R TV	SHIFT + MEDIA	Shift + Media
MEMO/CH/PGM	Memo/CH/PGM	SHIFT + OPT	Shift + Options
AMS	AMS/'" TV	SHIFT + DUAL	Shift + Dual
1	1 TV	SHIFT + 1	Shift + 1
2	2 TV	SHIFT + 2	Shift + 2
3	3 TV	SHIFT + 3	Shift + 3
4	4 TV	SHIFT + 4	Shift + 4
5	5 TV	SHIFT + 5	Shift + 5
6	6 TV	SHIFT + 6	Shift + 6
7	7 TV	SHIFT + 7	Shift + 7
8	8 TV	SHIFT + 8	Shift + 8
9	9 TV	SHIFT + 9	Shift + 9
10/0	10/0 TV	SHIFT + 0	Shift + 0
11/+	11/+ TV	SHIFT + GUIDE	Shift + Guide
12/-	12/- TV	SHIFT + PRE-CH	Shift + Pre Ch

Originalfernbedienung	Ersatzfernbedienung





**Originalfernbedienung    Ersatzfernbedienung**

	Volume Up CD		Vol +
	Volume Down		Vol -
	Mute CD		Mute
	L CD		Smart
	R CD		Media
	Front		Back
	Rear		Exit
	1 CD		1
	2 CD		2
	3 CD		3
	4 CD		4
	5 CD		5
	6 CD		6
	7 CD		7
	8 CD		8
	9 CD		9
	0/10 CD		0

**Originalfernbedienung    Ersatzfernbedienung**

	11/+ CD		Guide
	12/- CD		Pre Ch
	Memo/CH/PGM		Options
	AMS/" CD		Dual
	Play CD		Play
	Pause CD		Pause
	Stop CD		Stop
	<< CD		<<
	>> CD		>>
	Volume Up		Shift + Vol +
	Volume Down		Shift + Vol -
	Mute Phono		Shift + Mute
	L Phono		Shift + Smart
	R Phono		Shift + Media
	1 Phono		Shift + 1
	2 Phono		Shift + 2
	3 Phono		Shift + 3




**Originalfernbedienung Ersatzfernbedienung**

 





 
 

 

 


 

 
 
 
 



	4 Phono		Shift + 4
	5 Phono		Shift + 5
	6 Phono		Shift + 6
	7 Phono		Shift + 7
	8 Phono		Shift + 8
	9 Phono		Shift + 9
	0/10 Phono		Shift + 0
	Memo/CH/PGM		Shift + Options
	Play Phono		Shift + Play
	Pause Phono		Shift + Pause
	Stop Phono		Shift + Stop
	>> Phono		Shift + >>
	<< Phono		Shift + <<

**Originalfernbedienung Ersatzfernbedienung**






 

 

 
 

 





 

 

 

 

 





 






**Originalfernbedienung    Ersatzfernbedienung**

	Volume Up		Vol +
	Volume Down		Vol -
	Mute FM/AM		Mute
	Front		Back
	Rear		Exit
	L FM/AM		Smart
	R FM/AM		Media
	1 FM/AM		1
	2 FM/AM		2
	3 FM/AM		3
	4 FM/AM		4
	5 FM/AM		5
	6 FM/AM		6
	7 FM/AM		7
	8 FM/AM		8
	9 FM/AM		9
	10/0 FM/AM		0

**Originalfernbedienung    Ersatzfernbedienung**

	11/+ FM/AM		Guide
	12/- FM/AM		Pre Ch
	Memo/CH/PGM		Options
	AMS/'/' FM/AM		Dual
	Mode FM/AM		Subt
	Volume Up VCR		Shift + Vol +
	Volume Down		Shift + Vol -
	Mute VCR		Shift + Mute
	L VCR		Shift + Smart
	R VCR		Shift + Media
	1 VCR		Shift + 1
	2 VCR		Shift + 2
	3 VCR		Shift + 3
	4 VCR		Shift + 4
	5 VCR		Shift + 5
	6 VCR		Shift + 6
	7 VCR		Shift + 7





**Originalfernbedienung Ersatzfernbedienung**

 

 

 
	8 VCR	 + 	Shift + 8
	9 VCR	 + 	Shift + 9
	10/0 VCR	 + 	Shift + 0
	11/+ VCR	 + 	Shift + Guide
	12/- VCR	 + 	Shift + Pre Ch
	Memo/CH/PGM	 + 	Shift + Options
	AMS/'" VCR	 + 	Shift + Dual
	Mode VCR	 + 	Shift + Subt
	>> VCR	 + 	Shift + >>
	<< VCR	 + 	Shift + <<
	Pause VCR	 + 	Shift + Pause
	Stop VCR	 + 	Shift + Stop
	Rec VCR	 + 	Shift + Rec
	Play VCR	 + 	Shift + Play
	<> VCR	 + 	Shift + >>I

**Originalfernbedienung Ersatzfernbedienung**






**Originalfernbedienung    Ersatzfernbedienung**

	Volume UP CDV		Vol +
	Volume Down		Vol -
	Mute CDV		Mute
	Rear		Exit
	Front		Back
	L CDV		Smart
	R CDV		Media
	1 CDV		1
	2 CDV		2
	3 CDV		3
	4 CDV		4
	5 CDV		5
	6 CDV		6
	7 CDV		7
	8 CDV		8
	9 CDV		9
	10/0 CDV		0

**Originalfernbedienung    Ersatzfernbedienung**

	11/+ CDV		Guide
	12/- CDV		Pre Ch
	Memo/CH/PGM		Options
	Mode CDV		Subt
	Play CDV		Play
	Pause CDV		Pause
	Stop CDV		Stop
	>> CDV		>>
	<< CDV		<<
	Volume Up		Shift + Vol +
	Volume Down		Shift + Vol -
	Mute Tape		Shift + Mute
	L Tape		Shift + Smart
	R Tape		Shift + Media
	1 Tape		Shift + 1
	2 Tape		Shift + 2
	3 Tape		Shift + 3





 


 




Originalfernbedienung Ersatzfernbedienung

	4 Tape	 + 	Shift + 4
	5 Tape	 + 	Shift + 5
	6 Tape	 + 	Shift + 6
	7 Tape	 + 	Shift + 7
	8 Tape	 + 	Shift + 8
	9 Tape	 + 	Shift + 9
	10/0 Tape	 + 	Shift + 0
	12/- Tape	 + 	Shift + Pre Ch
	11/+ Tape	 + 	Shift + Guide
	Memo/CH/PGM	 + 	Shift + Options
	AMS/'" Tape		Dual
	Play Tape	 + 	Shift + Play
	Pause Tape	 + 	Shift + Pause
	<> Tape	 + 	Shift + >>
	Stop Tape	 + 	Shift + Stop
	>> Tape	 + 	Shift + >>
	Rec Tape	 + 	Shift + Rec

Originalfernbedienung Ersatzfernbedienung

	<< Tape		<<
	Deck B Tape	 + 	Shift + Green
	Deck A Tape	 + 	Shift + Red

