






Originalfernbedienung Ersatzfernbedienung

	Source		AV / Input / RDS
	Power		Power
	Mute		Mute / Dimmer
	TXT		Text / Goto
)) []		Audio / Lang I/II
	Rec		Rec / Rec Mode
	[>]		Eject / Surround
	Stop		Stop / Hold
	Play/Pause		Play / Slow
	Play/Pause		Pause / Step / Freeze
	<<		<< / Tune-
	<<		I<< / Preset-
	>>		>> / Tune+
	>>		>>I / Preset+
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat







 

 

 

 
 

 








 

Originalfernbedienung Ersatzfernbedienung

	Blue		Blue / Prime Video / Random
	_		Sound / Title
	Del		Exit / Cancel / Clear
	Vol+		Vol+
	Home		Menu / Home
	CH+		CH+ / Page+
	Vol-		Vol-
	Mouse		Smart / List
	CH-		CH- / Page-
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Settings		Setup / OPT /
	Back		Back / Return
	EPG		Guide / EPG / -/-





Originalfernbedienung Ersatzfernbedienung

	Recall		Fav / Marker / PC
	FAV	 + 	Shift + Fav / Marker / PC
	Info		Info / Angle
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Subtitle		Subtitle / EQ
	0		0
	Format		Picture / Format

Originalfernbedienung Ersatzfernbedienung

