







 






 
 























Originalfernbedienung Ersatzfernbedienung

|   |           |   |         |
|---|-----------|---|---------|
|    | Power     |    | Power   |
|    | 1         |    | 1       |
|    | 2         |    | 2       |
|    | 3         |    | 3       |
|    | 4         |    | 4       |
|    | 5         |    | 5       |
|    | 6         |    | 6       |
|    | 7         |    | 7       |
|    | 8         |    | 8       |
|    | 9         |    | 9       |
|    | 0         |    | 0       |
|    | Menu      |    | Menu    |
|  | Top       |  | Back    |
|  | On Screen |  | Info    |
|  | Setup     |  | Options |
|  | Up        |  | Up      |
|  | Down      |  | Down    |

Originalfernbedienung Ersatzfernbedienung

|   |          |   |       |
|---|----------|---|-------|
|    | Right    |    | Right |
|    | Left     |    | Left  |
|    | Enter/OK |    | Ok    |
|    | I<<      |    | I<<   |
|    | >>I      |    | >>I   |
|    | Play     |    | Play  |
|    | Stop     |    | Stop  |
|    | Pause    |    | Pause |
|    | Subtitle |    | Subt  |
|    | Audio    |    | Dual  |
|    | Zoom     |    | Eject |
|    | Angle    |    | Red   |
|   | Repeat   |   | Text  |
|  | A-B      |  | Green |
|  | Scan     |  | Media |
|  | Mute     |  | Mute  |

