

 


 


 








 





 

 












Originalfernbedienung Ersatzfernbedienung

	Power		Power
	PIP		Smart
	Swap		Back
	Zoom		Eject
	PIP+		>>
	PIP-		<<
	Freeze		Subt
	Sleep		Sleep
	Light		Shift + Smart
	Red		Red
	Presets		Options
	List		List
	Green		Green
	Yellow		Yellow
	Info		Info
	Blue		Blue
	Guide		Guide

Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Down		Down
	Right		Right
	Zoom+		Shift + Ch +
	Left		Left
	Zoom-		Shift + Ch -
	Ok		Ok
	Exit		Exit
	Text		Text
	Menu		Menu
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Return		Shift + Back
	Pr+		Ch +
	Pr-		Ch -
	1		1

 











Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Light		Smart
	Presets		Options
	Red		Red
	List		List
	Green		Green
	Yellow		Yellow
	Info		Info
	Blue		Blue
	Guide		Guide
	Up		Up
	Down		Down
	Right		Right
	Zoom+		Shift + Ch +
	Left		Left
	Zoom-		Shift + Ch -
	Ok		Ok











 

Originalfernbedienung Ersatzfernbedienung

	Exit		Exit
	Text		Text
	Menu		Menu
	Return		Back
	Pr+		Ch +
	Pr-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Av		AV





Originalfernbedienung Ersatzfernbedienung

	Rev		<<
	Play		Play
	Fwd		>>
	Rec		Rec
	Stop		Stop
	Pause		Pause

Originalfernbedienung Ersatzfernbedienung

