 





 

 







 


 

 

 






Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Open/Close		Eject
	Input Select		AV
	HDMI		TV/R
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Setup		Options
	Clear		Exit
	Prog+		Ch +

Originalfernbedienung Ersatzfernbedienung

	Prog-		Ch -
	Timer Prog		Sleep
	Variable Replay		Pre Ch
	Variable Skip		Shift + Pre Ch
	Top Menu		Menu
	Disc Menu		D. Menu
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Display		Info
	Return		Shift + Back
	Mode		Yellow
	Search		Blue
	<<		<<
	Play		Play





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
FWD	>>		>>
SKIP	I<<		I<<
STOP	Stop		Stop
SKIP	>>		>>
PAUSE	Pause		Pause
VCR	VCR		+ Shift + 1
HDD	HDD		+ Shift + 2
DVD	DVD		+ Shift + 3
TIME SLIP	Time Slip		+ Shift + Sleep
DUBBING	Dubbing		Back
REC MODE	Rec Mode		+ Shift + Rec
REC	Rec		Rec
SUBTITLE	Subtitle		Subt
1.3x/0.8x PPlay	1.3x/0.8x PPlay		Format
AUDIO	O))/Audio		Dual
SAT.LINK	Sat Link		3D

