




 




 




 

 

 
 
 

 











 







Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------|---|---------------|
|  | Power |  | Power |
|  | Standby |  +  | Shift + Power |
|  | Tuner |  | 1 |
|  | CD |  | 2 |
|  | CD-R |  | 3 |
|  | DTV |  | 4 |
|  | CBL/SAT |  | 5 |
|  | MD/Tape |  | 6 |
|  | Net/USB |  | 7 |
|  | VCR 1 |  | 8 |
|  | DVR/VCR 2 |  | 9 |
|  | DVD |  | Guide |
|  | V-AUX/Dock |  | 0 |
|  | Preset Up |  | Ch + |
|  | Preset Down |  | Ch - |
|  | A/B/C/D/E |  | Smart |
|  | Vol+ |  | Vol + |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------|---|-------|
|  | Vol- |  | Vol - |
|  | Mute |  | Mute |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |





Originalfernbedienung **Ersatzfernbedienung**

| | | | |
|--|-------------|--|---------------|
| | Power | | Power |
| | Standby | | Shift + Power |
| | Tuner | | 1 |
| | CD | | 2 |
| | CD-R | | 3 |
| | DTV | | 4 |
| | CBL/SAT | | 5 |
| | MD/Tape | | 6 |
| | Net/USB | | 7 |
| | VCR 1 | | 8 |
| | DVR/VCR 2 | | 9 |
| | DVD | | Guide |
| | V-AUX/Dock | | 0 |
| | Preset Up | | Ch + |
| | Preset Down | | Ch - |
| | A/B/C/D/E | | Smart |
| | Vol+ | | Vol + |

 



 

 



 

 
 

 

 


 






 



 
Originalfernbedienung **Ersatzfernbedienung**

| | | | |
|--|------|--|-------|
| | Vol- | | Vol - |
| | Mute | | Mute |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |









Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------|---|---------------|
|  | Power |  | Power |
|  | Standby |  | Shift + Power |
|  | Tuner |  | 1 |
|  | CD |  | 2 |
|  | CD-R |  | 3 |
|  | DTV |  | 4 |
|  | CBL/SAT |  | 5 |
|  | MD/Tape |  | 6 |
|  | Net/USB |  | 7 |
|  | VCR 1 |  | 8 |
|  | DVR/VCR 2 |  | 9 |
|  | DVD |  | Guide |
|  | V-AUX/Dock |  | 0 |
|  | Preset Up |  | Ch + |
|  | Preset Down |  | Ch - |
|  | A/B/C/D/E |  | Smart |
|  | Vol+ |  | Vol + |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------|---|-------|
|  | Vol- |  | Vol - |
|  | Mute |  | Mute |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |





Originalfernbedienung **Ersatzfernbedienung**

| | | | |
|--|-------------|---|---------------|
| | Power | | Power |
| | Standby | + | Shift + Power |
| | Tuner | | 1 |
| | CD | | 2 |
| | CD-R | | 3 |
| | DTV | | 4 |
| | CBL/SAT | | 5 |
| | MD/Tape | | 6 |
| | Net/USB | | 7 |
| | VCR 1 | | 8 |
| | DVR/VCR 2 | | 9 |
| | DVD | | Guide |
| | V-AUX/Dock | | 0 |
| | Preset Up | | Ch + |
| | Preset Down | | Ch - |
| | A/B/C/D/E | | Smart |
| | Vol+ | | Vol + |

Originalfernbedienung **Ersatzfernbedienung**

| | | | |
|--|------|--|-------|
| | Vol- | | Vol - |
| | Mute | | Mute |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

