


 


 
 

 


 



 




 

 

















 

 














Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Audio Monitor		Dual
	Format		Format
	Eject		Eject
	[i+]		Info
	Counter / Remain		Media
	Clear		Exit
	TV / Video		TV/R
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9

Originalfernbedienung Ersatzfernbedienung

	0		0
	-/--		Guide
	Input Select		AV
	Vol+		Vol +
	Vol-		Vol -
	Prog+		Ch +
	Prog-		Ch -
	Slow		Shift + <<
	x2		Shift + >>
	I<<		I<<
	>>I		>>I
	Rec		Rec
	SP / LP		Smart
	Menu		Menu
	Timer		Shift + AV
	Up		Up
	Pause		Pause





Originalfernbedienung Ersatzfernbedienung




 

 

 





 





 

 

 

 

 

 

 

 
	Left		Left
	<<		<<
	OK		Ok
	Play		Play
	Right		Right
	>>		>>
	Down		Down
	Stop		Stop

Originalfernbedienung Ersatzfernbedienung


 









 










Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Display		Info
	Format		Format
	Audio Monitor		Dual
	TV / Video		Smart
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	[≡]		Text
	[]		TV/R

Originalfernbedienung Ersatzfernbedienung

	-/--		Guide
	Vol+		Vol +
	Vol-		Vol -
	Prog+		Ch +
	Prog-		Ch -
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

