



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	P.Mode		3D
	S.Mode		Dual
	Sleep		Sleep
	Aspect		Format
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7

Originalfernbedienung Ersatzfernbedienung

	8		8
	9		9
	0		0
	Recall		Guide
	Input		Back
	Display		AV
	Up		Info
	Left		Up
	OK		Left
	Right		Ok
	Down		Right
	Menu		Down
	Exit		Menu
	Vol+		Exit
	Vol-		Vol +
	TV/Radio		Vol -
			TV/R



