
 



 
 


 
 


 



 




 
 






 




 


 

 










 




 







 

 
 
 






Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
On/Off		Power	
Audio Off		Mute	
Slow Up		Ch +	
Stop		Stop	
Slow Down		Ch -	
Pause		Pause	
Subt.		Subt	
Auto/Track		Smart	
Title		List	
Rep/A-B		TV/R	
Repeat/1/All		Text	
Zoom		Eject	
DVD/TV		AV	
Menu		Menu	
Menu Up		Up	
Display		Info	
Menu Left		Left	
OK Enter		Ok	
Menu Right		Right	
Menu Down		Down	
Next		>>	
Return		Back	
Top Menu		D. Menu	
Progr.		Sleep	
Prev.		<<	
Volume+		Vol +	
Volume-		Vol -	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	



 

 
 
 
 
Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
8			
9			
+10			
0			
C/CH			
Play			




 


 







 


 





 
 



 
 
 

 


 
Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
On/Off		Power	
Audio Off		Mute	
Slow Up		Ch +	
Stop		Stop	
Pause		Pause	
Slow Down		Ch -	
Subt.		Subt	
Auto/Track		Smart	
Rep/A-B		TV/R	
Repeat/1/All		Text	
Zoom		Eject	
DVD/TV		AV	
Title		List	
Menu		Menu	
Menu Up		Up	
Display		Info	
Menu Left		Left	
OK Enter		Ok	
Menu Right		Right	
Menu Down		Down	
Progr.		Sleep	
Return		Back	
Volume+		Vol +	
Next		>>	
Volume-		Vol -	
1		1	
Top Menu		D. Menu	
Prev.		<<	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	



Originalfernbedienung Ersatzfernbedienung Originalfernbedienung Ersatzfernbedienung

8		8	
9		9	
+10		Guide	
0		0	
C/CH		Pre Ch	
Play		Play	


 


 

 

 



 

 


 


 
 






 
 






Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
On/Off		Progr.	 Sleep
Menu Down		Display	 Info
Audio Off		Menu Left	 Left
Slow Down		OK Enter	 Ok
Stop		Menu Right	 Right
Slow Up		Volume+	 Vol +
Pause		Volume-	 Vol -
Subt.		1	 1
Rep/A-B		2	 2
Repeat/1/All		3	 3
Zoom		4	 4
Auto/Track		Next	 >>
DVD/TV		5	 5
Title		Top Menu	 D. Menu
Menu		6	 6
Return		Prev.	 <<
Menu Up		7	 7



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
8			
9			
+10			
0			
C/CH			
Play			



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
On/Off		Power	
Audio Off		Mute	
Stop		Stop	
Slow Up		Ch +	
Auto/Track		Smart	
Slow Down		Ch -	
Pause		Pause	
Title		List	
Subt.		Subt	
Rep/A-B		TV/R	
Repeat/1/All		Text	
Zoom		Eject	
DVD/TV		AV	
Menu		Menu	
Menu Up		Up	
Return		Back	
Display		Info	
Progr.		Sleep	
Menu Left		Left	
Next		>>	
OK Enter		Ok	
Top Menu		D. Menu	
Prev.		I<<	
Menu Right		Right	
Menu Down		Down	
Volume+		Vol +	
Volume-		Vol -	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
8			
9			
+10			
0			
C/CH			
Play			

