
 

 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	#		D. Menu
	Open/Close		Eject
	Mute		Mute
	Input 1		AV
	1		1
	2		2
	3		3
	Input 2		3D
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Tuner		Media
			Format

Originalfernbedienung Ersatzfernbedienung

	0		0
	zz		Sleep
	DVD		Smart
	Menu		Menu
	[-]		Subt
	Exit		Exit
	I<<		I<<
	>>I		>>I
	Tone		Dual
	Mode		List
	Up / Tune+ /		Up
	Up / Tune+ /		>>
	Vol+		Vol +
	Left		Left
	Preset / Play / OK		Ok
	Right		Right
	Vol-		Vol -





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 Down / Tune- /	 Down		
 Down / Tune- /	 <<		
 Stop / FM Mode	 Stop		
 Stop / FM Mode	 Red		
 Pause	 Pause		
 RDS Search	 TV/R		
 RDS Search	 Green		
 Repeat / RDS Display	 Text		
 Repeat / RDS Display	 Info		
 Repeat / RDS Display	 Yellow		

