



Originalfernbedienung Ersatzfernbedienung

	Power Blue		Shift + Power
	POWER Red		Power
	RED / F1		Red
	GREEN / F2		Green
	YELLOW / F3		Yellow
	BLUE / F4		Blue
	MUTE		Mute
	AV		AV
	Sound Mode		Dual
	SETUP		Options
	APP		Media
	TV		TV/R
	≡		Text
	KB		Guide
	I<<<		I<<<
	>>>I		>>>I
	<<<		<<<

Originalfernbedienung Ersatzfernbedienung

	>>		>>
	Home		Smart
	BACK		Back
	UP		Up
	LEFT		Left
	OK		Ok
	RIGHT		Right
	DOWN		Down
	: ≡		Menu
	i		Info
	VOL+		Vol +
	PLAY/PAUSE		Pause
	PLAY/PAUSE		Play
	CHAN.+		Ch +
	VOL-		Vol -
	STOP		Stop
	CHAN.-		Ch -





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
1	1	1	1				
2	2	2	2				
3	3	3	3				
4	4	4	4				
5	5	5	5				
6	6	6	6				
7	7	7	7				
8	8	8	8				
9	9	9	9				
	Format	PICTURE FORMAT	Format				
0	0	0	0				
	Recall	FAV PRE-CH	Pre Ch				

