 



 


 
 



 
 
 

 
 
 
 
 




 
 

 
 
 
 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Play / Pause		Play
	USB / Stop		Stop
	USB / Stop		Media
	Sleep		Rec
	Info		Info
	Red / I<<		Red
	Red / I<<		I<<
	Green / >>I		>>I
	Green / >>I		Green
	Yellow / <<		Yellow
	Yellow / <<		<<
	Blue / >>		Blue
	Blue / >>		>>
	FAV		Pre Ch
	SAT		AV

Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Menu		Menu
	Exit		Exit
	Subtitle		Subt
	TXT		Text
	Recall		Back
	Audio		Dual
	Page +		Ch +
	Page -		Ch -
	1		1
	2		2
	3		3
	4		4





Originalfernbedienung Ersatzfernbedienung

5	5	5	5
6	6	6	6
7	7	7	7
8	8	8	8
9	9	9	9
0	0	0	0
EPG	EPG	GUIDE	Guide
TV/RADIO	TV / Radio	SEARCH TV/R	TV/R

Originalfernbedienung Ersatzfernbedienung

