







 
 


 
 



 
 






 








Originalfernbedienung Ersatzfernbedienung

	POWER		Power
	WWW		Smart
	SLEEP		Sleep
	INFO		Info
	SCREEN		Media
	SOURCE		AV
	RED / PAGE+		Red
	GREEN / PAGE-		Green
	YELLOW		Yellow
	BLUE / TITLE		Blue
	UP		Up
	LEFT		Left
	OK		Ok
	RIGHT		Right
	DOWN		Down
	EPG		Guide
	BACK		Back

Originalfernbedienung Ersatzfernbedienung

	MENU		Menu
	V+		Vol +
	MUTE		Mute
	P/CH+		Ch +
	V-		Vol -
	SWAP		Pre Ch
	P/CH-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

