
 













**Originalfernbedienung Ersatzfernbedienung**

	Standby		Power
	Mute		Mute
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Menu		Menu
	Exit		Exit
	Red / UHF		Red
	Green / Audio		Green
	Green / Audio		Dual
	Yellow / Pause		Yellow
	Yellow / Pause		Pause
	Blue / Recall		Blue
	Blue / Recall		Back
	1		1






 
**Originalfernbedienung Ersatzfernbedienung**

	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	EPG		Guide
	Group		Pre Ch
	Vol+		Vol +
	Vol-		Vol -
	CH+		Ch +
	CH-		Ch -
	Page+		>>
	Page-		<<





Originalfernbedienung   Ersatzfernbedienung

	Info		Info
	SAT/TV		AV
	SAT/TV		Media

Originalfernbedienung   Ersatzfernbedienung