



**Originalfernbedienung    Ersatzfernbedienung**

|   |       |   |               |
|---|-------|---|---------------|
|    | Power |    | Power         |
|    | Mute  |    | Mute / Dimmer |
|    | Vol+  |    | Vol+          |
|    | Vol-  |    | Vol-          |
|    | Inic  |    | Smart / List  |
|    | 1     |    | 1             |
|    | 2     |    | 2             |
|    | 3     |    | 3             |
|    | 4     |    | 4             |
|    | 5     |    | 5             |
|   | 6     |   | 6             |
|  | 7     |  | 7             |
|  | 8     |  | 8             |
|  | 9     |  | 9             |
|  | 0     |  | 0             |
|  | ZAP+  |  | CH+ / Page+   |
|  | ZAP-  |  | CH- / Page-   |

**Originalfernbedienung    Ersatzfernbedienung**

|   |        |   |                             |
|---|--------|---|-----------------------------|
|    | Red    |    | Red / Netflix / Search      |
|    | Green  |    | Green / APP / Repeat        |
|    | Yellow |    | Yellow / YouTube / Repeat   |
|    | Blue   |    | Blue / Prime Video / Random |
|    | Menu   |    | Menu / Home                 |
|    | Portal |    | Display / Media             |
|    | Back   |    | Back / Return               |
|    | Exit   |    | Exit / Cancel / Clear       |
|    | Up     |    | Up                          |
|    | Selec  |    | OK                          |
|   | Down   |   | Down                        |
|  | Right  |  | Right                       |
|  | Left   |  | Left                        |
|  | Audio  |  | Audio / Lang I/II           |
|  | Info   |  | Info / Angle                |
|  | Serv   |  | Setup / OPT /               |

