


 
 
















 








Originalfernbedienung Ersatzfernbedienung

	?		Zoom / Size
	Power		Power
	TV/Rad		TV/Radio /
	Guide		Guide / EPG / -/--
	Info		Info / Angle
	Ratio		Picture / Format
	Input		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	List		Smart / List

















Originalfernbedienung Ersatzfernbedienung

	0		0
	Q.View		Display / Media
	Settings		Setup / OPT /
	Up		Up
	Q.Menu		Menu / Home
	Left		Left
	OK		OK
	Right		Right
	Back		Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	Vol+		Vol+
	Fav		Fav / Marker / PC
	P+		CH+ / Page+
	Vol-		Vol-
	AD		Audio / Lang I/II
	P-		CH- / Page-





**Originalfernbedienung   Ersatzfernbedienung**

	Mute		Mute / Dimmer
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow / Brightness-		Yellow / YouTube / Repeat
	Blue /		Blue / Prime Video / Random
	Stop		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Subtitle		Subtitle / EQ
	<<		<< / Tune-
	<<<		I<< / Preset-
	>>>		>>> / Tune+
	>>		>>I / Preset+
	Text		Text / Goto
	T.Opt		D.Menu / Top

**Originalfernbedienung   Ersatzfernbedienung**