
 













 


 



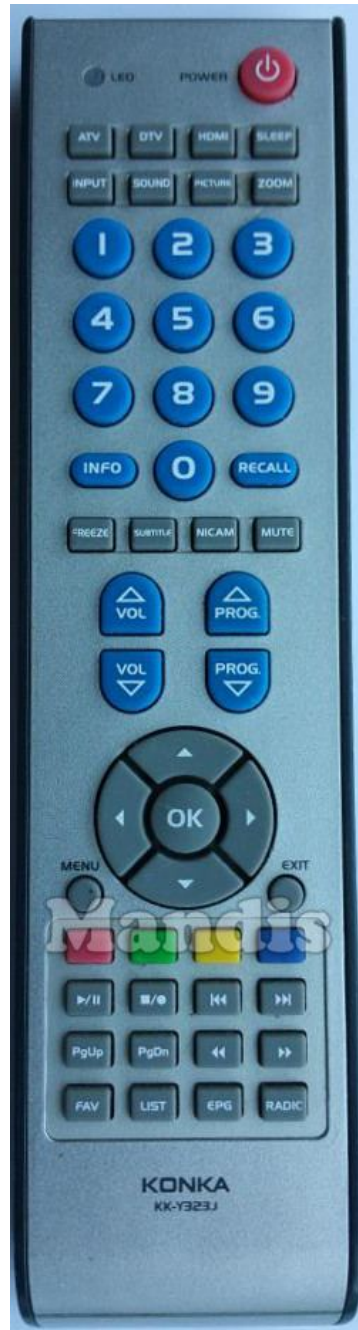 

**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	ATV		Display / Media
	DTV		D.Menu / Top
	HDMI		Shift + 0
	Sleep		Sleep / Timer
	Input		AV / Input / RDS
	Sound		Sound / Title
	Picture		Picture / Format
	Zoom		Zoom / Size
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8

**Originalfernbedienung    Ersatzfernbedienung**

	9		9
	0		0
	Recall		Back / Return
	Info		Info / Angle
	Freeze		Pause / Step / Freeze
	Subtitle		Subtitle / EQ
	Nicam		Audio / Lang I/II
	Vol +		Vol+
	Vol -		Vol-
	Mute		Mute / Dimmer
	Prog +		CH+ / Page+
	Prog -		CH- / Page-
	Navegacion Subir		Up
	Navegacion Bajar		Down
	Navegacion		Right
	Navegacion		Left
	OK		OK







Originalfernbedienung	Ersatzfernbedienung
-----------------------	---------------------

	Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	Rojo		Red / Netflix / Search
	Verde		Green / APP / Repeat
	Amarillo		Yellow / YouTube / Repeat
	Azul		Blue / Prime Video / Random
	Play/Pause		Play / Slow
	Stop/Rec		Stop / Hold
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	PgUp		Shift + CH+ /
	PgDn		Shift + CH- /
	<<		<< / Tune-
	>>		>> / Tune+
	FAV		Fav / Marker / PC
	LIST		Smart / List
	EPG		Guide / EPG / -/--

Originalfernbedienung	Ersatzfernbedienung
-----------------------	---------------------

	RADIO		TV/Radio /

