

 



 

 
 

 

 
 

 

 

 
 
 


 




Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------|---|--------------------|
|  | Power |  | Power |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 10 |  | Guide / EPG / -/-- |
|  | +10 |  | Fav / Marker / PC |
|  | Tuner |  | 0 |
|  | 1 CD 10Key |  | Shift + 1 |
|  | 2 CD 10Key |  | Shift + 2 |
|  | 3 CD 10Key |  | Shift + 3 |
|  | 4 CD 10Key |  | Shift + 4 |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------------|---|----------------------------|
|  | 5 CD 10Key |  | Shift + 5 |
|  | 6 CD 10Key |  | Shift + 6 |
|  | 7 CD 10Key |  | Shift + 7 |
|  | 8 CD 10Key |  | Shift + 8 |
|  | 9 CD 10Key |  | Shift + 9 |
|  | 10 CD 10Key |  | Shift + Guide / EPG / -/-- |
|  | +10 CD 10Key |  | Shift + Fav / Marker / PC |
|  | Phono |  | Exit / Cancel / Clear |
|  | Program |  | TV/Radio / |
|  | Fade Muting |  | Mute / Dimmer |
|  | Vol- |  | Vol- |
|  | Vol+ |  | Vol+ |
|  | P. Edit |  | Menu / Home |
|  | AUX |  | AV / Input / RDS |
|  | Stop Deck B |  | Shift + Stop / |
|  | < Deck B Control |  | Shift + Pause / Step / |
|  | > Deck B Control |  | Shift + Play / |

Slow



