























 







 










Originalfernbedienung Ersatzfernbedienung

	Power		Power
	TV		TV/Radio /
	Input		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Last		Back / Return
	Info		Info / Angle
	Sleep		Sleep / Timer
	Sound		Sound / Title

Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	Exit		Exit / Cancel / Clear
	Menu		Menu / Home
	Up		Up
	CH+		CH+ / Page+
	Down		Down
	CH-		CH- / Page-
	Right		Right
	Vol+		Vol+
	Vol-		Vol-
	Left		Left
	Enter		OK
	Red/PIP On/Off		Red / Netflix / Search
	Green/Input PIP		Green / APP / Repeat
	Yellow/Sound PIP		Yellow / YouTube / Repeat
	Blue/Size PIP		Blue / Prime Video / Random
	[≡]		Setup / OPT /



