





















Originalfernbedienung Ersatzfernbedienung

Power		Power
Mute		Mute / Dimmer
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
0		0
Recall		Back / Return
Sleep		Sleep / Timer
CH.List		Smart / List
Source		AV / Input / RDS
Audio / Nicam		Audio / Lang I/II

Originalfernbedienung Ersatzfernbedienung

Up		Up
Left		Left
OK		OK
Right		Right
Down		Down
Menu		Menu / Home
Exit		Exit / Cancel / Clear
Vol+		Vol+
Vol-		Vol-
Aspect		Shift + Picture / Format
Auto		Info / Angle
CH+		CH+ / Page+
CH-		CH- / Page-
P.Mode		Picture / Format
S.Mode		Sound / Title
Display		Display / Media
Fav		Fav / Marker / PC



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
TZT	 Text / Goto		
SUB	 Subtitle / EQ		
EPG	 Guide / EPG / -/--		
Size	 Zoom / Size		
Stop	 Stop / Hold		
I<< / Index	 I<< / Preset-		
>>I / S.Page	 >>I / Preset+		
Hold	 +  Shift + Stop /		
Play/Pause	 Play / Slow		
Play/Pause	 Pause / Step / Freeze		
<<	 << / Tune-		
>>	 >> / Tune+		
Reveal	 TV/Radio /		
Red	 Red / Netflix / Search		
Green	 Green / APP / Repeat		
Yellow	 Yellow / YouTube / Repeat		
Blue	 Blue / Prime Video / Random		

