



























 








 





















 


 

 
 






Originalfernbedienung Ersatzfernbedienung



 



 








 




 


 
	Power		Power
	Mute		Mute / Dimmer
	TV		TV/Radio /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TV/AV		AV / Input / RDS
	Q.View		Fav / Marker / PC
	Up		Up
	Prog+		CH+ / Page+

Originalfernbedienung Ersatzfernbedienung

	Prog-		CH- / Page-
	Down		Down
	Right		Right
	Vol+		Vol+
	Left		Left
	Vol-		Vol-
	OK		OK
	Menu		Menu / Home
	Zoom		Zoom / Size
	I/II		Audio / Lang I/II
	Info		Info / Angle
	P.Timer		Sleep / Timer
	Swap		Back / Return
	Picture		Picture / Format
	Timer		Shift + Sleep / Timer
	Sound		Sound / Title
	Red		Red / Netflix / Search





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Green  Green / APP / Repeat		
	Yellow  Yellow / YouTube / Repeat		
	Blue  Blue / Prime Video / Random		
	Index  Display / Media		
	Hold  Stop / Hold		
	Size  Shift + Zoom /		
	Text  Text / Goto		
	Subtitle  Subtitle / EQ		
	Mix  Shift + Text /		
	Reveal  D.Menu / Top		
	Cancel  Exit / Cancel / Clear		
	Sub Code  Shift + Back / Return		

