



Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|---------|--|-------------------|
| | Power | | Power |
| | Source | | AV / Input / RDS |
| | 1 | | 1 |
| | 2 | | 2 |
| | 3 | | 3 |
| | 4 | | 4 |
| | 5 | | 5 |
| | 6 | | 6 |
| | 7 | | 7 |
| | 8 | | 8 |
| | 9 | | 9 |
| | 0 | | 0 |
| | TTX/MIX | | Text / Goto |
| | PRE-CH | | Fav / Marker / PC |
| | Mute | | Mute / Dimmer |
| | CH LIST | | Smart / List |
| | Vol+ | | Vol+ |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|----------|--|------------------------|
| | Vol- | | Vol- |
| | Ch+ | | CH+ / Page+ |
| | Ch- | | CH- / Page- |
| | Settings | | Setup / OPT / |
| | Home | | Menu / Home |
| | Guide | | Guide / EPG / -/- |
| | Info | | Info / Angle |
| | E-Manual | | D.Menu / Top |
| | Up | | Up |
| | Down | | Down |
| | Left | | Left |
| | Right | | Right |
| | Enter | | OK |
| | Return | | Back / Return |
| | Exit | | Exit / Cancel / Clear |
| | Red | | Red / Netflix / Search |
| | Green | | Green / APP / Repeat |



