

 


 






 















 

 







Originalfernbedienung	Ersatzfernbedienung
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Text	 Text / Goto
 Back	 Back / Return
 Mute	 Mute / Dimmer
 Vol+	 Vol+
 Vol-	 Vol-
 CH+	 CH+ / Page+

Originalfernbedienung	Ersatzfernbedienung
 CH-	 CH- / Page-
 Exit	 Exit / Cancel / Clear
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right
 OK	 OK
 Menu	 Menu / Home
 APP	 Shift + Green / APP /
 List	 Smart / List
 i	 Info / Angle
 EPG	 Guide / EPG / -/-
 ALT	 Audio / Lang I/II





Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung
SUB	SUBTITLE Subtitle / EQ
TV/RADIO	PROGRAM TV/RADIO /

Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung

